



THE NEW ROTABALL STRAPS

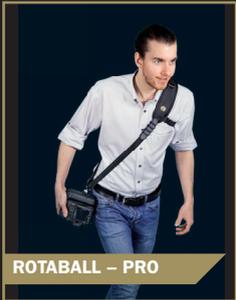


ROTABALL - PRO

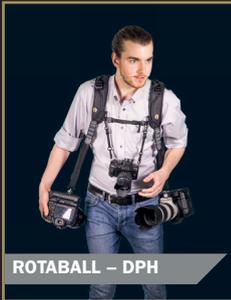

ROTABALL - DPH




ROTABALL - ONE

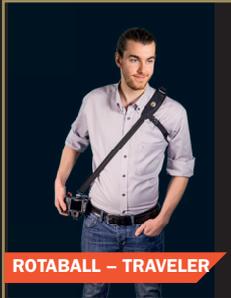

ROTABALL - TRAVELER




ROTABALL - SURF

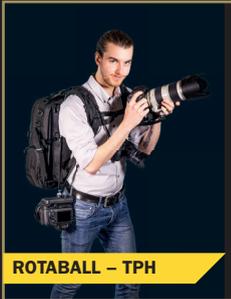

ROTABALL - TPH



ROTABALL - BPS

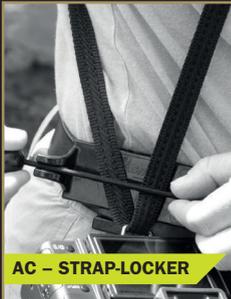

AC - STRAP-LOCKER



SUN-SNIPER-STRAP

SUN-SNIPER.com

WHAT DOES OUR SISTER COMPANY PRODUCE?

THE MOST PROFESSIONAL SYSTEM FOR LIGHT ENHANCING IN PHOTOGRAPHY
HANDMADE IN GERMANY

WWW.SUNBOUNCE.COM



SUN-SWATTER

Photo: WPG



SUN-SWATTER

SUN-BOUNCER

SUN-MOVER

Photo: Robin Hinsch

SUNBOUNCE.COM
MADE IN GERMANY

WAS MACHT EIGENTLICH UNSERE SCHWESTERFIRMA?

DAS PROFESSIONELLSTE SYSTEM ZUR LICHTVEREDELUNG IN DER PHOTOGRAPHIE
HANDMADE IN GERMANY

WWW.SUNBOUNCE.COM



SUN-BOUNCER

Photo: Benjamin Jehne, Berlin



SUN-BOUNCER

Photographed at the Greg Gormans Mendocino Workshop.
Photo: WPG



BOUNCE-WALL

Photo: Martin Krolop

SUN-SNIPER
GERMANY

NEW!

THE NEXT SUN-SNIPER GENERATION

ROTABALL

DESIGNED BY THE SUNBOUNCE + SUN-SNIPER TEAM



THE SAFETY-BELT SYSTEM FOR YOUR VALUABLE CAMERA

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

SUN-SNIPER ROTABALL
PROFESSIONAL SNIPER STRAPS

THE SAFETY BELT FOR YOUR PROFESSIONAL CAMERA

🇬🇧 INSTRUCTION MANUAL

Please read these instructions carefully before using the **SUN-SNIPER CAMERA STRAP** for the first time.

Photo 1+2.

Screw the Connector tight into the tripod socket of your camera housing or the lens mounting of the lens.

Photo 3.

When screwing in the connector, ensure that the screw can be inserted far enough into the camera thread.

The black rubber washer must be firmly pressed against the bottom of the camera and be visibly squeezed to guarantee that it provides secure support.



Check that all parts of the system are undamaged and function properly before each use. It is particularly important to check the strap and to check that all the screws are secured properly.

Photo 4+5.

Wear the belt with the round "SUN-SNIPER" logo facing the front. Adjust the length of the SNIPER-STRAP such that the camera rests above your backside.

Photo 6.

When using the BLOKKER to prevent the connector from being unscrewed by someone not authorized to do so: Before screwing in the connector, slide the BLOKKER over the connector and as far as possible towards the strap.

Only open the clip as much as necessary.

Now screw the connector into the tripod thread. Then slide the BLOKKER completely over the connector such that the pin on the front end of the BLOKKER rests against the front or back of the camera on the casing. Now it is impossible to unscrew the connector without being noticed.

Photo 7.

Once you have donned that SUN-SNIPER camera strap, thread the PITT under your arm and connect it with the click connector. Then adjust the length of the underarm strap. If you can move quickly with the camera and the shoulder pad remains in place, the length is right.

Photo 8.

Click the LIMITER open and slide it as far back as you would like to allow the camera to swing (can happen when running or biking). Once you find the best position, close the LIMITER. It now rests securely on the strap.



For long lenses please use socket at lens.



🇩🇪 BEDIENUNGSANLEITUNG

Bitte beachten Sie unbedingt diese Bedienungsanleitung vor dem ersten Einsatz Ihres **SUN-SNIPER KAMERAGURTES**.

Foto 1+2.

Schrauben Sie den Konnektor am Stativgewinde Ihres Kameragehäuses oder am Objektivträger des Objektivs fest.

Foto 3.

Bitte achten Sie beim Einschrauben des Konnektors darauf, dass die Schraube tief genug in das Gewinde der Kamera eingeschraubt werden kann.

Die schwarze Gummischeibe muss fest an den Kameraboden gepresst und sichtbar gequetscht werden, um einen sicheren Halt zu gewährleisten.



Prüfen Sie bitte vor jeder erneuten Benutzung, ob alle Teile des Systems noch funktionstüchtig und unbeschädigt sind. Insbesondere prüfen Sie bitte, ob das Gummi richtig gequetscht ist und der **ROTABALL KONNEKTOR** fest sitzt.

Foto 4+5.

Tragen Sie den Gurt so, dass das runde "SUN-SNIPER"-Logo nach vorne zeigt. Stellen Sie den SNIPER-STRAP in der Länge so ein, dass die Kamera etwas oberhalb Ihres Pos zum Liegen kommt.

Foto 6.

Wenn Sie den BLOKKER gegen das unautorisierte und unbemerkte Herausdrehen des Konnektors einsetzen, dann schieben Sie ihn bitte vor dem Verbinden mit der Kamera über den Konnektor und soweit wie möglich in Richtung des Gurtbandes.

Bitte öffnen Sie den Ring nur so weit wie nötig.

Nun schrauben Sie den Konnektor in das Stativgewinde und halten dabei den Stift am Ende des BLOKKERS vom Kameraboden fern. Anschließend schieben Sie den BLOKKER vollständig in Richtung Kameraboden, so dass der Stift am vorderen Ende des BLOKKERS auf der Vorder- oder Rückseite der Kamera am Gehäuse anliegt.

Nun ist das unbemerkte, unautorisierte Herausdrehen nicht mehr möglich.

Foto 7.

Wenn Sie den SUN-SNIPER Kameragurt angelegt haben, führen Sie den PITT bitte unter dem Arm durch und verbinden ihn mit dem Klickverbinder. Nun stellen Sie die passende Länge des Unterarm-Gurtes ein.

Foto 8.

Öffnen Sie den LIMITER indem Sie die Arretierung mit einem Klick lösen und verschieben Sie den LIMITER so weit nach hinten, wie sie eine Pendelbewegung (kann beim schnellen Laufen oder Fahrradfahren entstehen) der Kamera zulassen möchten. Haben Sie die für Sie passende Position bestimmt, schließen Sie den LIMITER wieder und er sitzt fest am Gurtband.



Wir empfehlen als Zubehör:
The ACTIVITY-CLIP STRAP-LOCKER

For Hiking, Biking, Climbing – the AC connects the camera safely to your body!

Beim Wandern, Radfahren und Klettern – der AC verbindet die Kamera sicher mit ihrem Körper!

Artikelnummer / Product Code:
SSN-ACL

